


# HG8240

Introduced the appearance, interfaces and LEDs of the HG8240.

## Appearance

Figure 1 Appearance of the HG8240

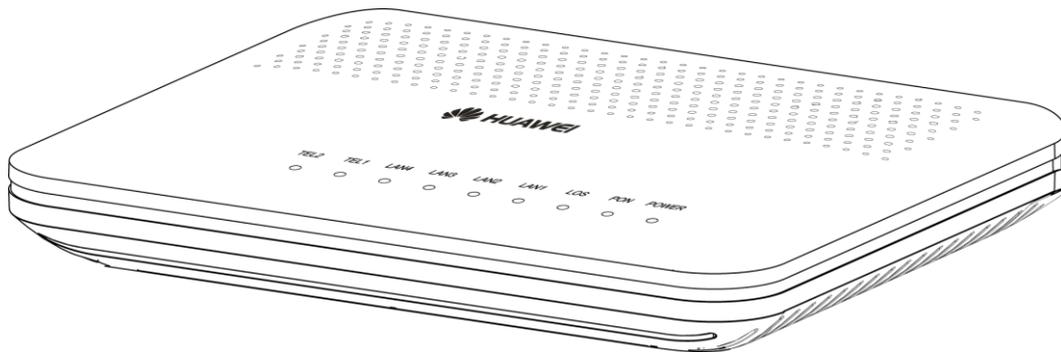

## Ports

Figure 2 and Figure 3 show the ports on the rear panel and side panel of the HG8240 respectively.

Figure 2 Ports on the rear panel of the HG8240

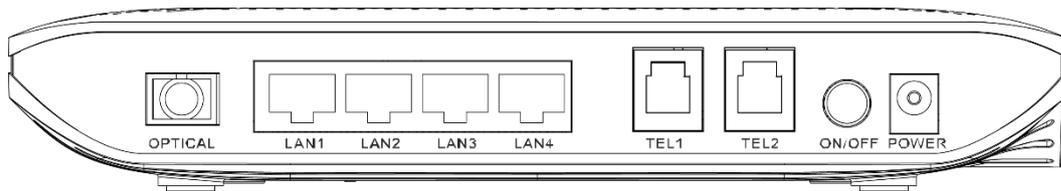



Table 1 Descriptions of the ports on the rear panel of the HG8240

Port and Button	Function
OPTICAL	Indicates the optical port. The optical port is equipped with a rubber plug and is connected to an optical fiber for upstream transmission. The type of the optical connector connected to the OPTICAL port is SC/APC.

**Table 1 Descriptions of the ports on the rear panel of the HG8240**

Port and Button	Function
LAN1-LAN4	Indicate auto-sensing 10/100/1000M Base-T Ethernet ports (RJ-45), used for connecting to PCs or IP STBs.
TEL1-TEL2	Indicate VoIP telephone ports (RJ-11), used for connecting to the ports on telephone sets.
ON/OFF	Indicates the power-on/power-off button, used for powering on or powering off the device.
POWER	Indicates the power port, used for connecting to the power adapter or backup battery.

**Figure 3 Ports on the side panel of the HG8240**

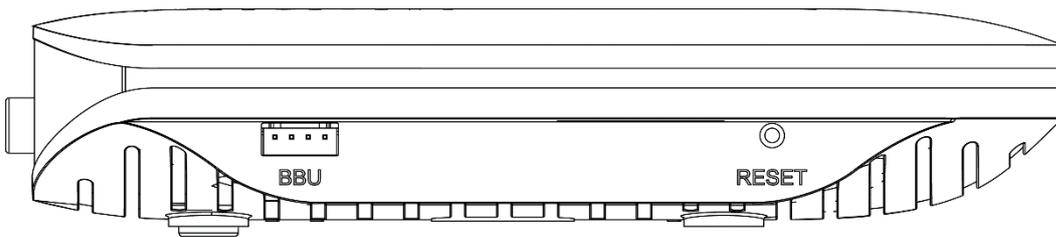

**Table 2 Descriptions of the ports on the side panel of the HG8240**

Port and Button	Function
BBU	Indicates the external backup battery monitoring port, used for connecting to the backup battery for monitoring the battery.
RESET	Indicates the reset button. Press the button for a short time to reset the device; press the button for a long time (longer than 10s) to restore the device to the default settings and reset the device.

## LEDs

Figure 4 LEDs on the HG8240

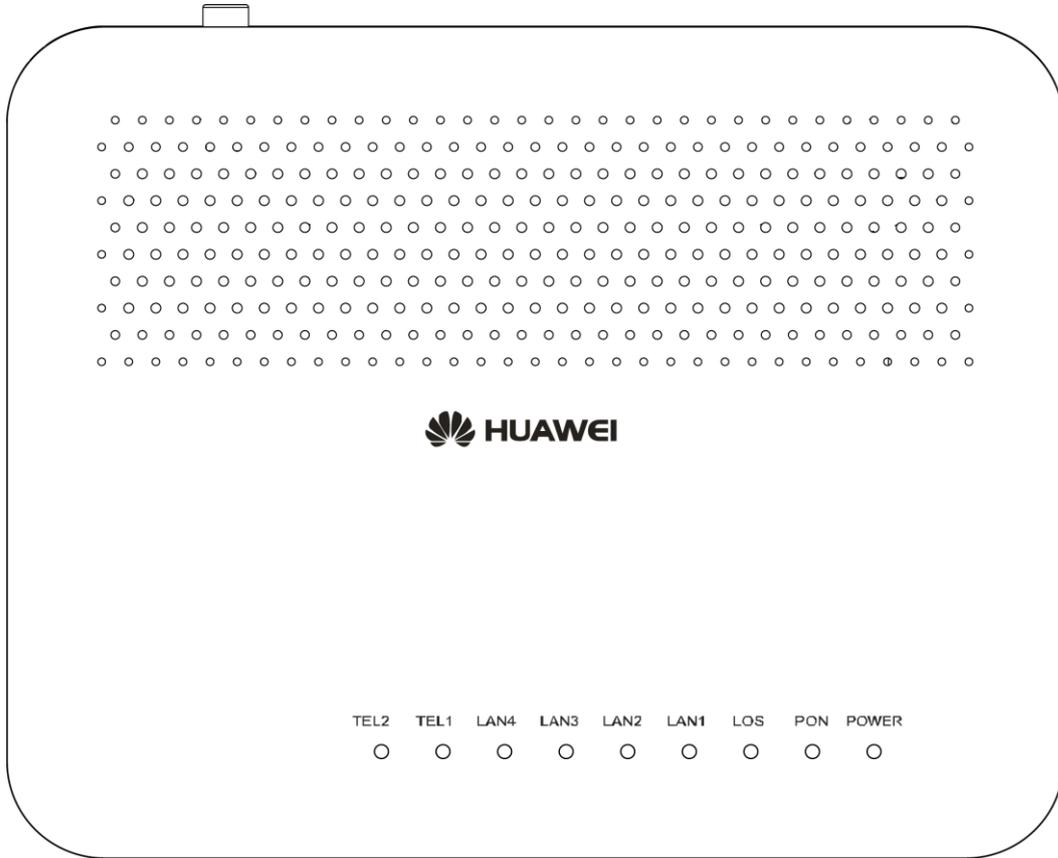


Table 3 Indications of the LEDs on the HG8240

Silk Screen	Name	Status	Indication
POWER	Power supply LED	Green: always on	The device is powered on.
		Orange: always on	The device is powered by the backup battery.
		Off	The power supply is cut off.
PON	Authentication LED	See Table 4.	
LOS	Connection LED	See Table 4.	
LAN1-LAN4	Ethernet port LED	Always on	The Ethernet connection is in the normal state.

**Table 3 Indications of the LEDs on the HG8240**

<b>Silk Screen</b>	<b>Name</b>	<b>Status</b>	<b>Indication</b>
		Blinks	Data is being transmitted on the Ethernet port.
		Off	The Ethernet connection is not set up.
TEL1-TEL2	Voice telephone port LED	Always on	The connection to the voice server is set up.
		Blinks quickly (twice per second)	The connection to the voice server is set up and the telephone is in the off-hook or ringing state.
		Blinks slowly (once two seconds)	The ONT is registering with the voice server.
		Off	The connection to the voice server is not set up.

**Table 4 Indications of PON and LOS LEDs**

<b>No.</b>	<b>LED Status</b>		<b>Indication</b>
	<b>PON</b>	<b>LOS</b>	
1	Off	Off	The ONT is disabled by the OLT.
2	Blinks quickly (twice per second)	Off	The ONT is attempting to set up a connection to the OLT.
3	Always on	Off	The connection between the ONT and the OLT is set up.
4	Off	Blinks slowly (once two seconds)	The Rx optical power of the ONT is lower than the optical receiver sensitivity.

Table 4 Indications of PON and LOS LEDs

No.	LED Status		Indication
	PON	LOS	
5	Blinks quickly (twice per second)	Blinks quickly (twice per second)	The OLT detects that the ONT is a rogue ONT.